750VR qug3 30/07/2003 4:57 PM Page 1

Quick-Use Guide

DVD750VR

Let's make things better.

PHILIPS

There are many ways to connect your new DVD/VCR to your Television and other equipment. This Quick-Use Guide shows the easiest, most common connection.
Higher quality connections are explained in the accompanying owner's manual and will provide better sound or picture if your TV and/or audio system is compatible.

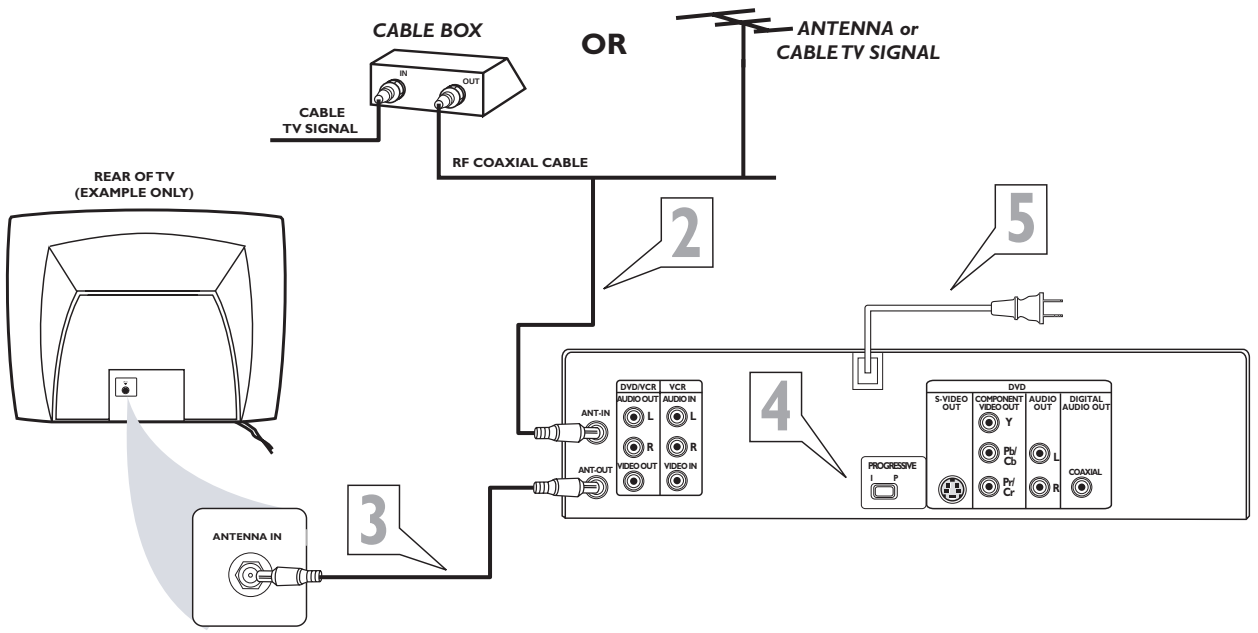

1 **Disconnect all equipment from the power outlets.** Connect the equipment to the power outlets only after you have finished hooking up everything. Never make or change connections with equipment connected to the power outlet.

2 **If you do not have a Cable Box, simply connect your Antenna or Cable TV signal directly to the ANT-IN jack on the rear of the DVD/VCR.**
If you do have a Cable Box (or Satellite Receiver), first connect the Cable TV (or Satellite) signal to the IN jack on the Cable Box/Satellite Receiver. Then, use an RF coaxial cable (like the one supplied) to connect the OUT jack of the Cable Box/Satellite Receiver to the ANT-IN jack on the DVD/VCR.

3 **Connect the supplied black RF coaxial cable to the DVD/VCR's ANT-OUT jack and to your TV's ANTENNA IN jack.** The TV's ANTENNA IN jack could be labelled 75-ohm, TV IN, or RF IN. Check your TV manual for details.

4 **Set the INTERLACE/PROGRESSIVE SCAN SELECTOR to INTERLACE (I).**

5 **Connect the power cords of the DVD/VCR, TV, and Cable Box (if applicable) to a power outlet.**

6 **Turn on the TV power. Set the TV to channel 3.** (If you cannot use channel 3 at your TV, you can use channel 4 instead. However, you must set the DVD/VCR's output channel to 4. See the accompanying DVD/VCR owner's manual for details.)

7 **Press STANDBY-ON ⏻ on the DVD/VCR or its remote to turn on the DVD/VCR. The first time you turn on the DVD/VCR, you should complete the VCR setup. See the other side of this Quick-Use Guide for details.**

750VR qug3 30/07/2003 4:57 PM Page 2

Quick-Use Guide (cont'd)

Setting Up the VCR the First Time

1 **Turn on the TV and set it to channel 3.**

2 **Press VCR, then press STANDBY-ON ⏻ to turn on the DVD/VCR.** This display will appear only the first time you turn on the DVD/VCR. (If you have turned on the power previously, you will not see this menu. See the owner's manual to select a language and set up channels.)

LANGUAGE SELECT
▶ ENGLISH [ON]
FRANCAIS
ESPAÑOL

3 **Press ▲ or ▼ to select English, French, or Spanish** as the language for VCR displays. **Then, press ▶.**

4 The AUTO SET UP message will appear. **Press ▶ to set up TV channels for the VCR.** When set up is complete, the lowest TV channel will appear on the TV.

AUTO SET UP

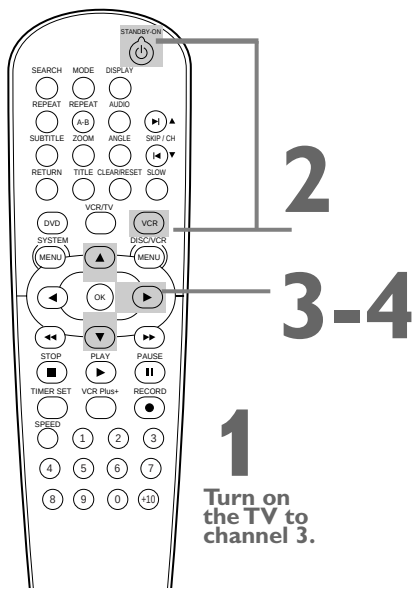

Playing a Disc

1 **With the TV and DVD/VCR on, press the DVD button to put the DVD/VCR in DVD mode.**

2 **Press OPEN/CLOSE ▲ to open the disc tray. Put a Disc in the tray** with the label facing up and the shiny side facing down.
Press OPEN/CLOSE ▲ again to close the tray.

3 **Playback may start automatically. If not, press PLAY ▶.** If a DVD Disc menu appears, use the ▼▲◀ ▶, OK, or Number buttons to select features or start playback. Follow the instructions in the menu.

4 **To stop playing a Disc, press STOP ■.**

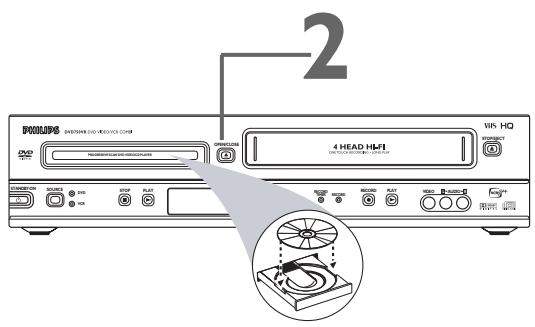

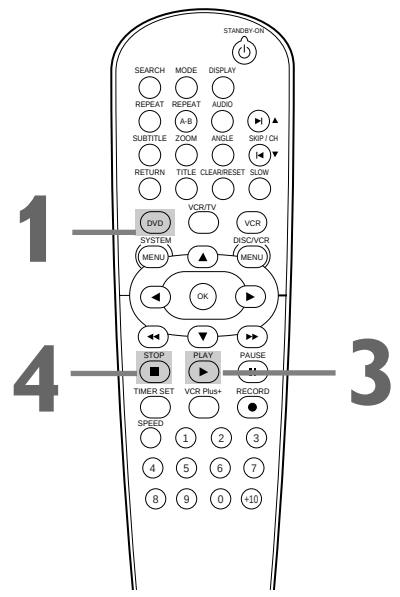

Playable Discs

The DVD Player of the DVD/VCR will play the following Discs.

DVDs must have a Region Code of ALL regions or Region 1.

DVDs must be recorded in the **NTSC** Color System.

8239 300 26702
H9420UD/0VMN03701*****